
Plastex Lok

Installation instructions




JOINING THE TILES


a) Position the tiles with the "finger" clips facing the same direction. "M" stands for male, with finger clips, "F" for female, with holes to fit finger clips.

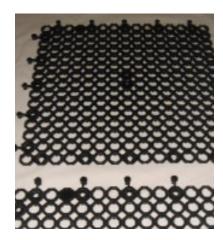

b) Position the "finger" clips below each corresponding hole

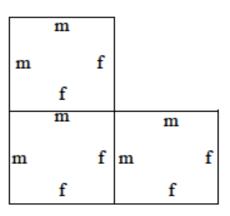


c) Using a rubber mallet, bang the top of all holes to join the tiles together

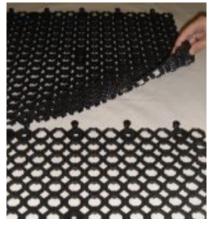

b) Tiles joined with head of fingers showing through joining holes



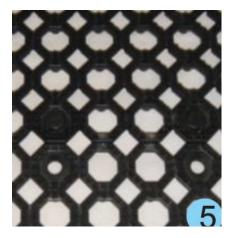

Plastex Lok

Installation instructions




FITTING THE EDGINGS

a) Familiarise yourself with the three kinds of edgings: male, female and corner

Male edging Female edging Corner



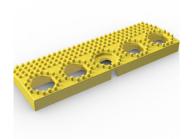



b) Once the tiles are joined together, you need to know the type of edging required for each tile

c) Position the finger clips of the male edgings below the corresponding hole of the tile and use a rubber mallet to join them to the tiles





d) Position the holes of the female edgings above each corresponding finger clips of the tile and use a rubber mallet to join them to the tiles

e) For external or internal corners, position the finger clips of the corner edging below the holes of the tiles and use a rubber mallet to join them to the tiles





Note: the pictures shown in this guide are for illustrative purposes only. Type of edgings may vary from diagram shown

Page 2 Date: November 2013